


HOW TO MEASURE A BOW HEIGHT

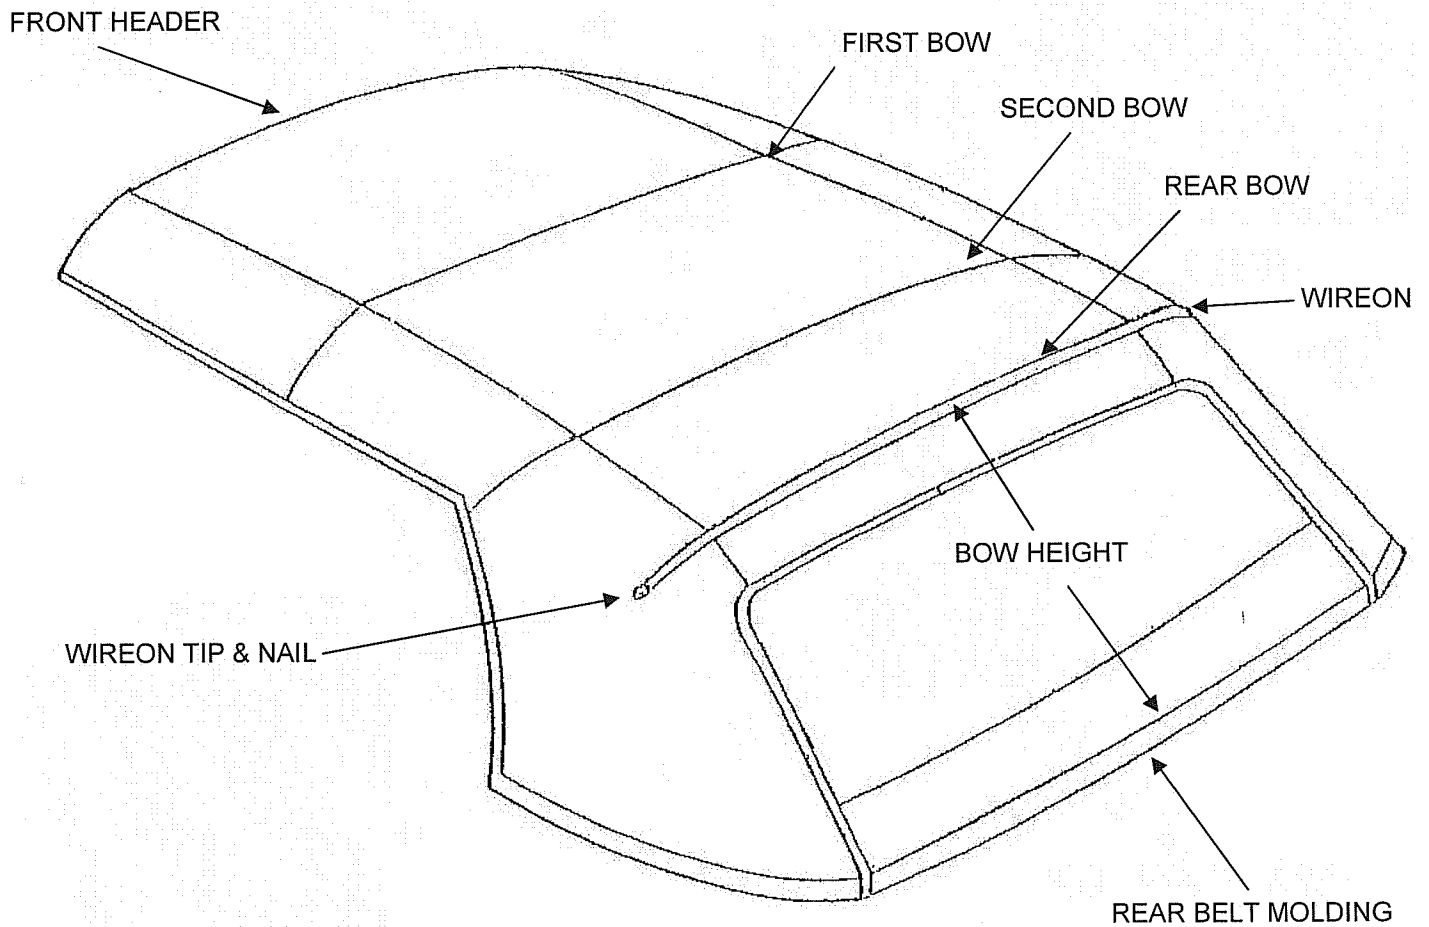

1. Check bow height measurement before starting installation of your new convertible top.
2. To measure bow height:
 - A. Locate the approximate center of the rear window.
 - B. Locate the rear bow
 - C. Locate belt molding around top of well opening
 - D. Place yardstick against window so that the bottom edge of the yardstick rests on the inside edge of the belt molding.
 - E. Read the ruler where the straight edge of the ruler intersects with the center of the rear bow or wire-on.
 - F. The measurement you have taken should not vary more than $\frac{1}{2}$ " from the specification on the listing. If the measurement is off more than $\frac{1}{2}$ ", reset the rear bow.